



# PSP Go Left Trigger Replacement


Written By: Miroslav Djuric



## INTRODUCTION


This guide shows you how to remove the PSP Go's left trigger buttons.

## Step 1 — Left Trigger

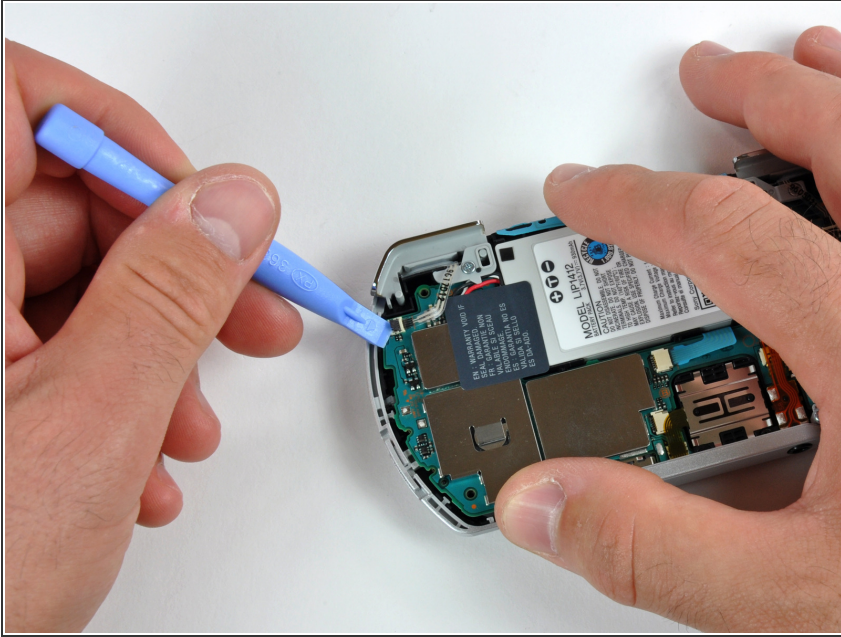


- Use a plastic opening tool to gently flip up the left trigger connector.

## Step 2

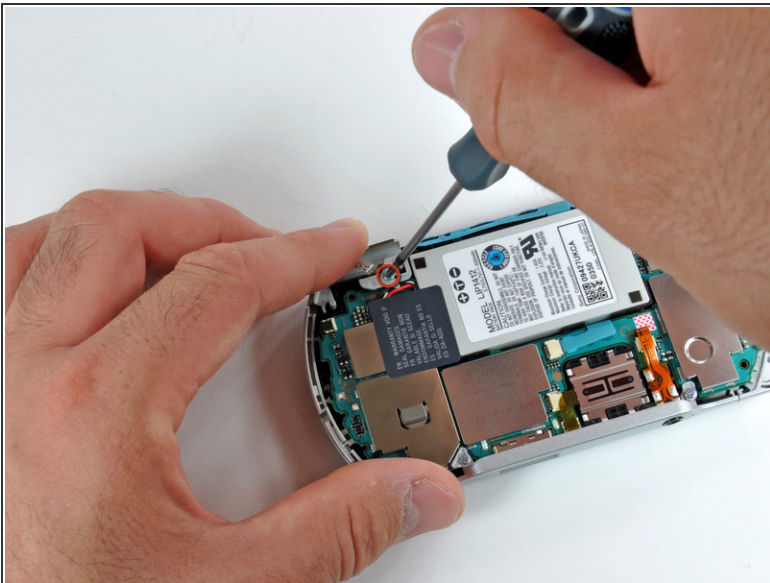

- Unscrew the lone Phillips screw holding the trigger in place. Remove both trigger and retaining plate from the PSP Go.

 If necessary, repeat steps 2 and 3 to remove the right trigger button.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-25 04:34:36 AM.